# Scale-Link<sup>TM</sup> Wireless

**The industry standard** take-off tool for entering linear measurements from your blueprints, maps, or plans into any Windows program. Just roll the scaler wheel along your print, then click to instantly transfer the measurement into your program. Scale-Link Wireless contains everything you need to get started. The included PlanWheel can be used remotely in the field or interfaced with your PC at distances of up to 25 feet!

> Change user defined scales, adder, etc.

10

NM

#### Select scale factors

- Architectural, Engineering, Map, and Metric
- 111 Built-in

III X

Add/Subtract

Linear

51.9 IN

n

Histosoft Excel - Book1

Edit View Insert Format Iools Data FlashPaper

∂ 3 1 2 1 2 2 • 1 • − 1 8 Σ • 21

- Thousands of available user-defined
- Create any custom scale with auto-scale feature

# (inches, feet, yards, meters, etc.)

Select units of readout

Zero the count and length

Click here to transfer length from PlanWheel WL into software program

Transfer count from PlanWheel WL into ~ <u>software prog</u>ram

The Ready Connect™ window indicates readout from the PlanWheel WL™.

#### Scale-Link Wireless Includes:

- 👂 PlanWheel WL™ Scaler
- Geady Connect<sup>™</sup> Software
- Charging Cradle w/ USB Cable
- Protective Case

Scalex Ready Connect

Zero

Program Units Scale Options

Copy <u>M</u>easure

Copy Count

 $1 \cdot 1$ 

- 🗧 One Year Warranty
- 👂 User Manual
- 👄 Rechargeable Batteries (2AAA)

## Scale-Link works with all Windows® operating systems.

GeoMart www.GeoMart.com 800-248-6277

## Scale-Link is specially suited for:

- All Windows construction estimating software
- Excel®, Quatro Pro®, Lotus 1-2-3® and other spreadsheets
- Access<sup>®</sup>, dBase<sup>®</sup>, Paradox<sup>®</sup>, Foxpro<sup>®</sup>, and other databases

#### System Requirements

- Windows<sup>®</sup> Compatible Computer
- 🗢 CD-ROM Drive
- 🗧 USB Port